READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING LUMINAIRE

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding. Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO. A0803

INSTRUCTIONS FOR INSTALLING A POWERARC™ MODULAR SPOT REFLECTOR TO A SPOT LUMINAIRE (round or square front)

INSTRUCTIONS FOR INSTALLING A T4 OR T6 PowerArc MODULAR SPOT REFLECTOR:


(See chart below for compatible luminaire/reflector combinations)

LUMINAIRES		COMPATIBLE REFLECTORS	
Cat. No.	DESCRIPTION	Cat. No.	DESCRIPTION
8304	T4 OPEN/SQUARE SPOT	MHT4RS	T4 SPOT
		MHT4RNF	T4 NARROW FLOOD
8314	T4 CLOSED/ROUND SPOT	MHT4RF	T4 FLOOD
8306	T6 OPEN/SQUARE SPOT	MHT6RS	T6 SPOT
		MHT6RNF	T6 NARROW FLOOD
8316	T6 CLOSED/ROUND SPOT	MHT6RF	T6 FLOOD

CAUTION: If used improperly, these lamps can cause serious skin burn and eye inflammation from shortwave ultraviolet radiation. DO NOT OPERATE LUMINAIRE WITHOUT PROTECTIVE LENS IN PLACE.

NOTE: After reflector is installed, see IS:83S for luminaire Installation, lamping, and operating instructions.

- 1. Support LENS and stide LENS SPRINGS into OPEN position. Remove LENS. (See FIG. 1)
- 2. Remove REFLECTOR SPRING by depressing spring as shown in FIG. 2 until SPRING TABS are removed from SPRING SLOTS
- 3. Alian REFLECTOR SLOT with the LENS HOLDING TAB and install REFLECTOR as shown in FIG. 3.
- 4. Reinsert REFLECTOR SPRING TABS into SPRING SLOTS on track head the same way it was removed in step 2.
- 5. Install T4 or T6 lamp as shown on IS:835.
- 6. Reinsert LENS by placing it behind HOLDING TAB first, then positioning it into opening. Slide LENS SPRINGS into CLOSED position. (See FIG. 1 and 4)

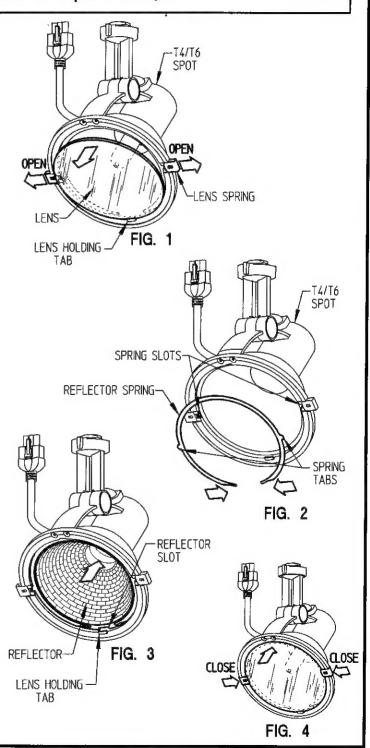

LIGHTOLIER a GENLYTE THOMAS company. 631 Airport Road, Fall River, MA 02720